

Preisliste 2006



Sonor Drumheads

Art. Nr.	Sonor Nr.	Entsprechende Remo Nr.	Bezeichnung	Zoll	Brutto CHF.
White Medium					
91080800	WM 08	BA-108-00	Tom Tom	8"	20.50
91081000	WM 10	BA-0110-00	Tom Tom/Snare Drum	10"	21.00
91081200	WM 12	BA-0112-00	Tom Tom/Snare Drum	12"	22.50
91081300	WM 13	BA-0113-00	Tom Tom	13"	23.00
91081400	WM 14	BA-0114-00	Tom Tom/Floor Tom/Snare Drum	14"	25.50
91081500	WM 15	BA-0115-00	Tom Tom/Floor Tom	15"	26.50
91081600	WM 16	BA-0116-00	Tom Tom/Floor Tom	16"	27.50
91081800	WM 18	BA-0118-00	Tom Tom/Floor Tom	18"	34.50
91082800	WM 18 B	BR-1118-00	Bass Drum	18"	40.00
91083000	WM 20 B	BR-1120-00	Bass Drum	20"	41.50
91083200	WM 22 B	BR-1122-00	Bass Drum	22"	44.00
91083400	WM 24 B	BR-1124-00	Bass Drum	24"	47.00
Clear Medium					
91000800	CM 08	BA-0308-00	Tom Tom	8"	20.50
91001000	CM 10	BA-0310-00	Tom Tom	10"	21.00
91001200	CM 12	BA-0312-00	Tom Tom	12"	22.50
91001300	CM 13	BA-0313-00	Tom Tom	13"	23.00
91001400	CM 14	BA-0314-00	Tom Tom/Floor Tom	14"	25.50
91001500	CM 15	BA-0315-00	Tom Tom/Floor Tom	15"	26.50
91001600	CM 16	BA-0316-00	Tom Tom/Floor Tom	16"	27.50
91001800	CM 18	BA-0318-00	Tom Tom/Floor Tom	18"	34.50
91002800	CM 18 B	BR-1318-00	Bass Drum	18"	40.00
91003000	CM 20 B	BR-1320-00	Bass Drum	20"	41.50
91003200	CM 22 B	BR-1322-00	Bass Drum	22"	44.00
91003400	CM 24 B	BR-1324-00	Bass Drum	24"	47.00
Clear Heavy					
91090800	CH 08	BE-0308-00	Tom Tom	8"	22.50
91091000	CH 10	BE-0310-00	Tom Tom	10"	23.00
91091200	CH 12	BE-0312-00	Tom Tom	12"	25.00
91091300	CH 13	BE-0313-00	Tom Tom	13"	26.00
91091400	CH 14	BE-0314-00	Tom Tom/Floor Tom	14"	28.00
91091500	CH 15	BE-0315-00	Tom Tom/Floor Tom	15"	30.00
91091800	CH 16	BE-0316-00	Tom Tom/Floor Tom	16"	31.00
91091800	CH 18	BE-0317-00	Tom Tom/Floor Tom	18"	39.00
91092800	CH 18 B	BB-1318-00	Bass Drum	18"	46.50
91093000	CH 20 B	BB-1320-00	Bass Drum	20"	48.00
91093200	CH 22 B	BB-1322-00	Bass Drum	22"	51.00
91093400	CH 24 B	BB-1324-00	Bass Drum	24"	54.50
Clear Power					
91064800	CP 18 B	P3-1318-C2	Bass Drum	18"	64.50
91065000	CP 20 B	P3-1320-C2	Bass Drum	20"	66.50
91065200	CP 22 B	P3-1322-C2	Bass Drum	22"	72.50
91065400	CP 24 B	P3-1324-C2	Bass Drum	24"	77.00
Black Power mit Logo					
91062800	BP 18 B/L	P3-1018-ES	Bass Drum Front	18"	77.50
91063000	BP 20 B/L	P3-1020-ES	Bass Drum Front	20"	81.50
91063200	BP 22 B/L	P3-1022-ES	Bass Drum Front	22"	85.50
91063400	BP 24 B/L	P3-1024-ES	Bass Drum Front	24"	90.50
White Power					
91061400	WP 14	P3-0114-BP	Snare Drum	14"	32.50
High Tension					
91041400	HT 14	KS-0114-00	Snare Drum	14"	101.50

White Heavy				
91072000 WH 10	BE-0110-00	Snare Drum	10"	23.50
91072200 WH 12	BE-0112-00	Snare Drum	12"	25.00
91072400 WH 14	BE-0114-00	Snare Drum	14"	28.50
White Double				
91073000 WD 10	PS-0100-00	Snare Drum	10"	32.00
91073200 WD 12	PS-0112-00	Snare Drum	12"	34.50
91073400 WD 14	PS-0114-00	Snare Drum	14"	37.00
Classic				
91074000 C 10	RA-0010-SS	Snare Drum	10"	33.50
91074200 C 12	RA-0012-SS	Snare Drum	12"	37.50
91074400 C 14	RA-0014-SS	Snare Drum	14"	39.50
Medium Resonance				
91071000 CM 10 R	SA-0110-00	Snare Drum	10"	19.00
91071200 CM 12 R	SA-0112-00	Snare Drum	12"	20.50
91071300 CM 13 R	SA-0114-00	Snare Drum	13"	21.50
91071400 CM 14 R	SA-0114-00	Snare Drum	14"	22.50
Clear Double				
91050800 CD 8	PS-0308-00	Tom Tom	8"	27.50
91051000 CD 10	PS-0310-00	Tom Tom	10"	28.50
91051200 CD 12	PS-0312-00	Tom Tom	12"	32.50
91051300 CD 13	PS-0313-00	Tom Tom	13"	33.00
91051400 CD 14	PS-0314-00	Tom Tom/Floor Tom	14"	35.50
91051500 CD 15	PS-0315-00	Tom Tom/Floor Tom	15"	36.50
91051600 CD 16	PS-0316-00	Tom Tom/Floor Tom	16"	38.50
91051800 CD 18	PS-0318-00	Tom Tom/Floor Tom	18"	47.50
91052800 CD 18 B	PS-1318-00	Bass Drum	18"	52.50
91053000 CD 20 B	PS-1320-00	Bass Drum	20"	53.50
91053200 CD 22 B	PS-1322-00	Bass Drum	22"	56.50
91053400 CD 24 B	PS-1324-00	Bass Drum	24"	59.50
Soundmaster Bass Drum				
91014000 SM-1020-ES	Bass Drum (Black m. Logo)		20"	37.00
91014200 SM-1022-ES	Bass Drum (Black m. Logo)		22"	39.00
Marching-Bass Drum				
90927400 BD 24-10 H	glatt weiss, heavy		24"	59.50
90927600 BD 26-10 H	glatt weiss, heavy		26"	66.50
90977400 BD 24-12 H	glatt weiss, heavy, Control Center, Control Ring		24"	85.00
90977600 BD 26-12 H	glatt weiss, heavy, Control Center, Control Ring		26"	90.00
90977800 BD 28-12 H	glatt weiss, heavy, Control Center, Control Ring		28"	100.00
90978400 BD 24-12 H OL	glatt weiss, heavy, Control Center, Control Ring, ohne LOGO		24"	85.00
90978600 BD 26-12 H OL	glatt weiss, heavy, Control Center, Control Ring, ohne LOGO		26"	90.00
90978800 BD 28-12 H OL	glatt weiss, heavy, Control Center, Control Ring, ohne LOGO		28"	100.00
90967400 BD 24-4 MC	glatt schwarz, medium, Control Center, Control Ring		24"	100.00
90967600 BD 26-4 MC	glatt schwarz, medium, Control Center, Control Ring		26"	110.00
90967800 BD 28-4 MC	glatt schwarz, medium, Control Center, Control Ring		28"	118.00
90968400 BD 24-4 MC OL	glatt schwarz, medium, Control Center, Control Ring, ohne LOGO		24"	100.00
90968600 BD 26-4 MC OL	glatt schwarz, medium, Control Center, Control Ring, ohne LOGO		26"	110.00
90968800 BD 28-4 MC OL	glatt schwarz, medium, Control Center, Control Ring, ohne LOGO		28"	118.00
Concert Master Timpani				
90992300 CMT 23	für P 623		23"	120.00
90992600 CMT 26	für P 626		26"	130.00
90992900 CMT 29	für P 629		29"	143.00
90993200 CMT 32	für P 632		32"	150.00

HÖHNER SONOR®

Gewerbestrasse 12, 3065 Bolligen, Tel: 031/928 24 30
sonor-drums@bluewin.ch / www.sonor.ch